

**SIEMENS**



Issued by  
Siemens Home and Office Communication Devices GmbH & Co. KG  
Schlavenhorst 66  
D-46395 Bocholt


© Siemens Home and Office Communication Devices GmbH & Co. KG 2005  
All rights reserved. Subject to availability.  
Rights of modification reserved.

[www.siemens.com/gigaset](http://www.siemens.com/gigaset)

**Gigaset C45**

**Gigaset**

# Handset at a glance

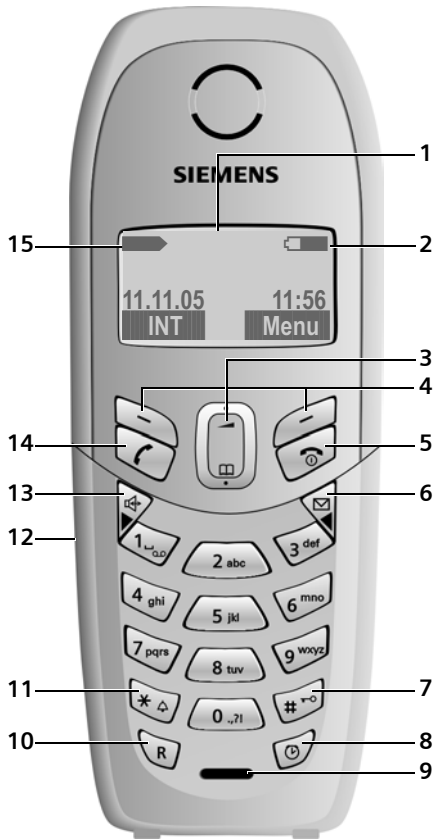

- 1 **Display** in idle status (example)
- 2 **Battery charge condition**  
[Battery icon with 1/3 filled] (1/3 charged to fully charged)  
[Battery icon with 1/4 filled] flashes: battery nearly empty  
[Battery icon with 1/2 filled] flashes: battery charging
- 3 **Control key** (page 7)
- 4 **Display keys** (page 7)
- 5 **End call key, On/Off key**  
End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 6 **Message key**  
Opens calls and message lists  
Flashes: new message or new call
- 7 **Hash key**  
Keypad lock on/off (press and hold, page 7)  
Toggle between upper/lower case letters and digits for text entry (page 18)
- 8 **Alarm clock key** (page 14)  
Activate and deactivate the alarm clock
- 9 **Microphone**
- 10 **Recall key**  
Enter flash (press briefly)  
Insert a pause (press and hold)
- 11 **Star key**  
Ringtones on/off (press and hold in idle status)
- 12 **Connection socket for headset** (page 8)
- 13 **Handsfree key**  
Switch between earpiece and handsfree mode  
Lights up: handsfree activated  
Flashes: incoming call
- 14 **Talk key**  
Answer a call, open last number redial list (press briefly), start dialling (press and hold)
- 15 **Signal strength**  
[Signal strength icon with 3 bars] (low to high)  
[Signal strength icon with 1 bar] flashes: no reception

# Contents

- Handset at a glance** ..... 1
- Safety precautions** ..... 3
- Gigaset C45 – More than just a telephone** ..... 4
- Setting up the handset for use** ..... 4
  - First steps ..... 4
- Operating the handset** ..... 7
  - Activating/deactivating the handset ..... 7
  - Activating/deactivating the keypad lock ..... 7
  - Control key on the handset ..... 7
  - Display keys ..... 7
  - Returning to idle status ..... 7
  - Menu management ..... 8
  - Correcting wrong inputs ..... 8
  - Belt clip and headset ..... 8
  - Making an external call ..... 9
  - End call ..... 9
  - Answering a call ..... 9
  - Handsfree talking ..... 9
- Using the directory and lists** ..... 10
  - Directory ..... 10
  - Last number redial list ..... 11
  - Opening lists with the message key ..... 11
- Handset settings** ..... 12
  - Changing the display language ..... 12
  - Setting the display ..... 12
  - Activating/deactivating Auto talk ..... 12
  - Adjusting the loudspeaker volume ..... 12
  - Changing ringtones ..... 12
  - Advisory tones ..... 13
  - Using the handset as an alarm clock ..... 14
  - Restoring the handset factory settings ..... 14
- Appendix** ..... 15
  - Symbols and typographical conventions used ..... 15
  - Care ..... 15
  - Contact with liquid ..... 15
  - Questions and answers ..... 15
  - Service (Customer Care) ..... 15
  - Authorisation ..... 16
  - Specifications ..... 16
  - Guarantee Certificate
    - United Kingdom ..... 16
    - Guarantee Certificate
      - Ireland ..... 17
  - Writing and editing text ..... 18
- Index** ..... 19

# Safety precautions

## Caution:

Read the safety precautions and the operating instructions before use.  
Explain their contents to your children, and the potential hazards associated with using the telephone.



Use only the mains adapter supplied, as indicated on the underside of the charging cradle.



Fit only the **recommended rechargeable batteries (page 16)** of the same type!  
This means: do not use any other battery type or non-rechargeable batteries as this could result in significant health risks and personal injury.



Insert rechargeable batteries with the correct polarity, and use them according to this user guide (polarity symbols can be seen in the handset's battery compartment, page 4).



The operation of medical appliances may be affected. Note the technical conditions of the respective environment, e.g. doctor's surgery.



The handset may cause an unpleasant humming noise in hearing aids.



Do not install the charging cradle in bathrooms or shower rooms. The handset and charging cradle are not splash proof (page 15).



Do not use the phone in environments with a potential explosion hazard, e.g. paint shops.



If you give your Gigaset to someone else, make sure you also give them the operating manual.



All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

## Note:

Not all of the functions described in this user guide are available in all countries.

## Gigaset C45 – More than just a telephone

---

Your handset not only lets you store up to 100 telephone numbers (page 10) – your Gigaset C45 can do much more:

- ◆ You can programme the keys of your handset with important phone numbers. The number is then dialled by simply pressing a key (page 10).
- ◆ Use the handsfree function (page 9) to keep your hands free when making a call.
- ◆ Use your handset as an alarm clock (page 14).

**Have fun using your new Gigaset C45!**

## Setting up the handset for use

---

The pack contains:

- ◆ one Gigaset C45 handset
- ◆ one charging cradle (incl. mains adapter)
- ◆ two batteries
- ◆ one battery cover
- ◆ one belt clip
- ◆ one user guide

## First steps

---


### Inserting the batteries

**Caution:**

Use only the rechargeable batteries recommended by Siemens on page 16! This means: never use a conventional (non-rechargeable) battery or other battery type, otherwise serious damage to health and property cannot be ruled out, e.g. the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- ▶ Insert the batteries the right way round (see figure).

The polarity is indicated in the battery compartment.

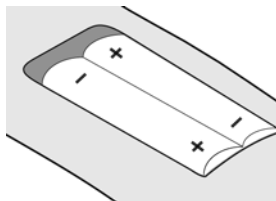


The handset switches on automatically. You will hear a confirmation tone.

**Note:**

If the handset does not activate automatically when the batteries are fitted, you must first charge the batteries (page 5).

### Closing the battery cover

- ▶ Place the cover on the battery compartment as shown in the diagram, then push it up until it clicks into position.

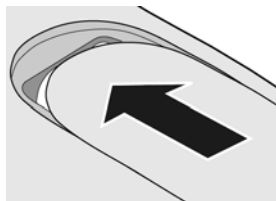

### Opening the battery cover

- ▶ Press down on the battery cover below its upper end and slide the cover down.

### Connecting the charging cradle

---

Connecting up the charging cradle and mounting it on the wall (if required) is described at the end of these instructions.

## Registering your phone

Before you can use your Gigaset C45 you must register it to a base station. The actual registration procedure will depend on the type of base station.

### Automatic registration Gigaset C45 to Gigaset C450/C455

**Important:** The handset must not already be registered to any base unit.

Registering the handset to the Gigaset C450/C455 base is automatic.

- ▶ Place the handset in the charging cradle of the base unit with its **display facing forward**.

You will hear a confirmation tone.

Automatic registration takes around one minute. While registration is in progress the screen displays **Registering** and **Base** flashes. The handset is assigned the lowest unassigned internal number (1–4). If several handsets are registered to the base, the internal number is shown in the display after registration, e.g. **INT 2**. This means that the handset has been assigned the internal number 2. If the handset has been registered successfully, you will see the display key **INT** at the bottom left of the display.

#### Notes:

- Automatic registration is not possible when the base on which you wish to register the handset is being used to make a call.
- A key press cancels automatic registration.
- If four handsets are already registered to the base station there are two options:
  - The handset with the internal number 4 is in idle status: the handset you wish to register is assigned the number 4. The handset that was previously number 4 is de-registered.
  - The handset with the internal number 4 is being used: the handset you wish to register cannot be registered.
- If automatic registration does not work the handset will have to be registered manually (page 5).

## Manual registration Gigaset C45

You must activate manual registration of the handset at both the handset and the base station.

If the handset has been registered successfully you will see the display key **INT** at the bottom left of the display. Otherwise repeat the procedure.

### 1. On the handset

**Menu** → **Settings** → **Handset** → **Register Handset**



Enter the system PIN of the base station (the default is 0000) and press **OK**. You will see, e.g. **Registering Base**.

### 2. On the base station

- ▶ Within 60 seconds, initiate registration on the base as described in the base unit's instructions.

## Charging batteries

- ▶ Plug the mains adapter of the charging cradle into a mains power socket.
- ▶ Place the handset in the cradle with its display facing forward.

Battery charging is indicated in the top right of the display by a flashing battery icon or . During handset operation, the battery icon indicates the charge status of the batteries (page 1).

### Charging and discharging the battery for the first time

The correct charge status can only be displayed when the batteries are first fully charged **and** discharged through use.

- ▶ To do this, leave the handset in the charging cradle **without interruption** until the battery icon stops flashing in the display. Your handset need not be switched on for it to charge.
- ▶ Once the batteries are fully charged, remove the handset from the cradle and do not put it back again until the batteries are fully discharged.

## Setting up the handset for use

### Notes:

- After the first battery charge **and** discharge you may replace your handset in the charging cradle after every call.
- The handset should only be placed in a base station or charging cradle that is designed for it.
- When the handset is in the cradle, it charges even if it is switched off. You will see the charge status in the display.
- If the handset has switched itself off because the batteries are flat and if it is then placed in the cradle, it will switch itself on automatically.

### Please note:


- Always repeat the charging and discharging procedure if you remove the batteries from the handset and insert them in again.
- The batteries may warm up as they are charging. This is not dangerous.
- After a while the charge capacity of the batteries will decrease for technical reasons.

## Setting the date and time


---

**Menu** → **Settings** → **Date/Time**



Enter the day, month and year with 6 digits and press **OK**. Use  to move between the fields.




Enter hours and minutes with 4 digits (e.g. 0 7 1 5 for 07.15 hrs) and press **OK**. Use  to move between the fields.

 

**Your Gigaset C45 is now ready for operation!**

## Operating the handset

### Activating/deactivating the handset

 Press and hold the end call key.  
You will hear the confirmation beep.

### Activating/deactivating the keypad lock

 Press and **hold** the hash key.  
You will hear the confirmation beep. The icon  appears in the display when the keypad lock is activated.

The keypad lock deactivates automatically when you receive a call and activates again after the call.


#### Note:

The handset displays an advisory message if you press a key by accident while the keypad lock is on. To deactivate the keypad lock, press and hold the hash key #.

### Control key on the handset





1 Control key



In this user guide, the side of the control key that you must press in the given operating situation is shown in black (top, bottom). Example:  for "press the top of the control key".

The control key has a number of different functions:



#### When the handset is in idle status

-  Open the directory.
-  Adjust the ringer melody volume of the handset (page 13).



#### In lists and menus

-  /  Scroll up/down line by line.

#### In an input field

-  /  Move the cursor **left** or **right**.


#### During an external call

-  Open the directory.
-  Adjust loudspeaker volume for earpiece and handsfree mode.

### Display keys

The current display functions are shown in the bottom display line in reversed highlights. The functions of the display keys change according to the operating situation.

Example:

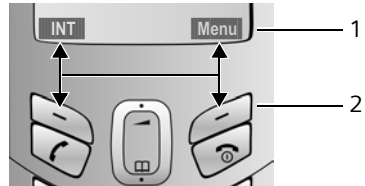


- 1 Current display key functions
- 2 Display keys

The most important display icons are:

- Back** Go back one menu level or cancel the operation.
- INT** Make an internal call.
- Menu** Open the main menu or a context-dependent menu.
- OK** Confirm highlighted selection.
- <C** Delete key: backspace delete one character at a time.

### Returning to idle status

You wish to return to idle status from anywhere in the menu:

- ▶ Press the end call key  and hold.

Or:

- ▶ Press no key; after 2 minutes the display will return **automatically** to idle status.

Changes which you have not confirmed/stored by pressing **OK** will be rejected.

For an example of the display in idle status, page 1.



## Menu management

---


Your telephone's functions are accessed in a menu that has a number of levels.

### Main menu (first menu level)

---

- ▶ To open the main menu, press **Menu** with the handset in idle status.

### Accessing a function

- ▶ Scroll to the function with the control key  and press **OK**.


The corresponding submenu (the next menu level) is opened.


### Submenus

---

The functions in the submenus are displayed as lists.


Accessing a function:

- ▶ Scroll to the function with the control key  and press **OK**.

A short press on the end call key  returns you to the previous menu level / cancels the operation.

## Correcting wrong inputs

---

- ◆ Navigate to the incorrect input with the control key if  is displayed.
- ◆ Press **<C** to delete the character to the left of the cursor.
- ◆ Insert new character to the left of the cursor.
- ◆ When entering the time and date etc., edit the flashing character.

**You will find explanations for the symbols and typographical conventions used in this user guide in the appendix, page 15.**

## Belt clip and headset

---

By using a belt clip and headset (optional) you can easily make your Gigaset C 45 a constant companion both inside the building and in its immediate vicinity.

### Attaching the belt clip

---

There are notches for attaching the belt clip on the side of the handset at approximately the same height as the display.

- ▶ Press the belt clip to the back of the handset so that the lugs of the belt clip click into the notches.

The tongue of the belt clip must face the battery compartment.

### Connection socket for headset

---

You can use headsets with jack connectors.

The following models have been tested and are therefore recommended:

HAMA Plantronics M40, MX100 und MX150.

The call quality of other models cannot be guaranteed.

## Making calls

### Making an external call

External calls are calls using the public telephone network.



Enter the number and press the talk key.

Or:



Press and **hold** the talk key and then enter the number.

You can cancel the dialling operation with the end call key.

#### Notes:

- Dialling with the directory (page 10) or last number redial list (page 11) saves repeated keying of phone numbers.
- You can assign a number from the directory to a key for speed dialling (page 10).
- You can edit or add to any phone number selected by means of quick dialling or from the directory and use it for the current call.

### End call



Press the end call key.

### Answering a call

The handset indicates an incoming call in three ways: it rings, there is a display on the screen and the handsfree key flashes.

You can take calls:

- ▶ Pressing the talk key.
- ▶ Pressing the handsfree key.

If the handset is in the charging cradle and the **Auto Answer** function is activated (page 12), the handset will take a call automatically when you lift it out of the cradle.

If the ringtone is intrusive, press **Menu Silent**.

You can take the call so long as it is displayed on the screen.

## Handsfree talking

In handsfree mode you need not hold the handset to your ear but place it e.g. on the table in front of you to allow others to participate in the call.

### Activating/deactivating handsfree

#### Activating while dialling



Enter the number and press the handsfree key.

- ▶ You should inform your caller before you use the handsfree function so that they know someone else is listening.

#### Switching between earpiece and handsfree mode



Press the handsfree key.

Switch handsfree on and off during a call.

If you wish to place the handset in the charging cradle during a call:

- ▶ Press the handsfree key and hold it while placing the handset in the base station. If the handsfree key does not light up, press the key again.

To find out how to adjust the volume, see page 12.


## Using the directory and lists

You can save 100 entries in the directory.

You can create a personalised directory for your own individual handset. However, you can send the list or individual entries to other handsets (page 10).

### Directory

In the **directory** you store numbers and matching names.

- ▶ With the handset in idle status, open the directory by pressing .

#### Length of an entry


Number: max. 32 digits


Name: max. 16 characters

#### Note:

You can assign a number from the directory to a key for speed dialling (page 10).

### Storing the first number in the directory


 → Directory empty New Entry?


 Enter number and press **OK**.

 Enter the name and press **OK**.

### Storing a number in the directory

 → **Menu** → New Entry


 
 Enter number and press **OK**.

 Enter the name and press **OK**.



### Selecting a directory entry


 Open the directory.

You have the following options:

- ◆ Use  to scroll to the entry until the required name is selected.
- ◆ Enter the first character of the name, or scroll to the entry with .

### Dialling with the directory

 →  (select entry; page 10)


 Press the talk key. The number is dialled.


### Managing directory entries

You have selected an entry (page 10).

#### Editing an entry


**Menu** → Edit Entry

 Edit the number if required, and press **OK**.

 Edit the name if required, and press **OK**.

#### Using other functions

 →  (select entry; page 10) → **Menu**

The following functions can be selected with .

##### Use Number

Edit or add a stored number. Then dial or use other functions with **Menu**.

##### Delete Entry

Delete a selected entry.

##### Send Entry

Send a single entry to another handset (page 10).

##### Delete List

Delete **all** directory entries.

##### Send List

Send the complete list to another handset (page 10).

##### Shortcut

Assign to the current entry for speed dialling to a selected key.

### Using speed dial keys


- ▶ Press and **hold** the required quick dial key.

### Sending the directory to another handset

#### Requirements:

- ◆ The sending and receiving handsets must both be registered to the same base station.
- ◆ The other handset and the base unit can send and receive directory entries.

 →  (select entry; page 10) → **Menu**  
→ Send Entry / Send List

 Enter the internal number of the receiver handset and press **OK**.

A successful transfer is confirmed by a message and the confirmation beep at the receiver handset.

If you have sent a single entry, you can transfer another entry with **OK**.

**Please note:**

- ◆ Entries with identical numbers are not over-written in the receiver handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.

**Copying the displayed number to the directory**

Numbers that are displayed in a list such as the calls list or the last number redial list, can be copied to the directory.



A number is displayed.

**Menu** → Copy to Directory

- ▶ Complete the entry (page 10).

**Copying a number from the directory**




You can open the directory in many operating situations e.g. to copy a number. Your handset need not be in idle status.

-  Open the directory.
-  Select entry (page 10).



**Last number redial list**


The last number redial list contains the ten numbers last dialled with the handset (max. 32 numbers). If one of the numbers is in the directory, the corresponding name will be displayed.

**Dialling from the last number redial list**

-  Press the key **briefly**.
-  Select an entry.
-  Press the talk key again. The number is dialled.

**Managing entries in the last number redial list**

-  Press the key **briefly**.
-  Select an entry.
- Menu** Press the display key.

The following functions can be selected with :

**Use Number** (as in the directory, page 10)


**Copy to Directory**


Copying an entry to the directory (page 11).

**Delete Entry** (as in the directory, page 10)

**Delete List** (as in the directory, page 10)

**Opening lists with the message key**

An advisory tone sounds as soon as a **new message** arrives in a list. The message key  flashes. A message appears in the display.

When you press the flashing key , you will see all the lists that contain new messages. If only one list contains new messages, this will be opened automatically.

**Note:**

If calls are stored in the network answering machine you will receive a message if the appropriate settings have been made (see the network answering machine instructions of your network provider).

## Handset settings



Your handset is preconfigured but you can change these settings to suit your individual requirements.

### Changing the display language


You can view the display texts in different languages.

**Menu** → **Settings** → **Handset** → **Language**

The current language is indicated by ✓.

-  Select a language and press **OK**.
-  Press and **hold** (idle status).

If you accidentally choose a language you do not understand:

- Menu** 4 2 2 Press keys one after the other.
-  Select the correct language and press **OK**.

### Setting the display

You have a choice of four colour schemes and several different contrasts. You can also set a screensaver and the illumination.

**Menu** → **Settings** → **Handset** → **Display**

You have the following options:

#### Screensaver

There are four different screensavers and No Screensaver or Digital Clock settings.

#### Colour Scheme

Four colour schemes. When the illumination is switched off the display is shown in black and white regardless of the selected setting.

#### Contrast


#### Backlight

In Charger / Without Charger . Determines whether the illumination stays on permanently or is switched off after a certain time (✓ = permanently switched on).


**Note:**

If the illumination is switched on outside the charging cradle, the standby time for the handset is considerably reduced!

## Activating/deactivating Auto talk

When this function is activated, when a call arrives you can simply lift the handset out of the charging cradle without having to press the talk key .



**Menu** → **Settings** → **Handset**

- Auto Answer** Select and press **OK** (✓ = on).
-  Press and **hold** (idle status).

### Adjusting the loudspeaker volume

You can set the loudspeaker volume for hands-free speaking to five different levels and the earpiece volume to three different levels. You can only adjust the loudspeaker volume during a call.



You are conducting an external call.

-  Press the control key.
-  Adjust the volume and press **OK**.

**Note:**

The handsfree volume can only be adjusted when this function is set.

## Changing ringtones

- ◆ **Volume:**  
Five volume levels (1–5; e.g. volume 2 = ) and "Crescendo" ring (6; volume increases with each ring = .
  - ◆ **Melody:**  
List of pre-loaded ringer melodies. The first three melodies are the "classical" ring tones.
- You can also set different melodies for the following functions:
- ◆ **External Calls** : For external calls
  - ◆ **Internal Calls** : For internal calls
  - ◆ **Alarm Clock** : For the alarm clock

## Setting ringer volume

---

The ringer volume is the same for all types of ring.

**Menu** → **Audio Settings** → **Ringer Volume**

Or in idle status:



Press **briefly**.

Then:



Adjust the volume and press **OK**.



Press and **hold** (idle status).

## Setting ringer melody

---

Set different ringer melodies for external calls, internal calls and the alarm clock.

**Menu** → **Audio Settings** → **Ringer Melody**

**External Calls** / **Internal Calls** / **Alarm Clock**

Select and press **OK**.



Select melody (✓ = on) and press **OK**.



 
Press and **hold** (idle status).

## Activating/deactivating the ringtone

---

You can turn off the ringer on your handset before you take a call or while the phone is in the idle state. You can take a call so long as it is displayed on the screen.

### Deactivating the ringer

\*△ Press the star key **and hold**, until the  icon appears in the display.

### Re-activating the ringtone

\*△ Press and **hold** the star key in idle status.

## Advisory tones

---

Your handset uses advisory tones to tell you about different activities and statuses. The following tones can be activated and deactivated independently of each other:

### ◆ **Advisory tones:**

- **Key beep:** Each key press is acknowledged.
- **Confirmation beep** (a rising tone sequence): at the end of the entry/setting, when the handset is placed in the charging cradle and when a new entry arrives on the calls list.
- **Error beep** (descending tone sequence): when you make an incorrect entry.
- **Menu end tone:** when scrolling at the end of a menu.

◆ **Battery warning tone:** the battery requires charging.

You cannot deactivate the confirmation tone for placing the handset in the charging cradle.

## Activating/deactivating advisory tones

---

**Menu** → **Audio Settings** → **Advisory Tones**

Select and press **OK** (✓ = on).

## Setting the battery warning tone

---

**Menu** → **Audio Settings** → **Battery Low**

**On / Off / During Call**

Select and press **OK** (✓ = on). The battery warning tone is activated or deactivated or sounds during a call.

## Using the handset as an alarm clock


---

### Activating/deactivating the alarm clock


---

**Menu** → Alarm Clock → Activation (✓ = in)

Or:

 Press the alarm clock key.


After you activate the alarm clock, the menu for setting the wake up time opens automatically (page 14).

If the alarm clock is set, the wake up time appears with the  icon in the display instead of the date.

### Setting the wake up time.

---

**Menu** → Alarm Clock → Wakeup time

 Enter the wake up time in hours and minutes, then press **OK**.

### When the alarm clock rings...

---

#### Alarm repeat after 5 minutes

**Snooze** Press the display key or any key.

If you press **Snooze** three times the alarm clock switches off for 24 hours.

#### Switching off the alarm clock for 24 hours

**Off** Press the display key.


## Restoring the handset factory settings

---

You can reset individual settings and changes you have made. This will not affect entries in the directory or the calls list, or the handset's registration to the base.

**Menu** → Settings → Handset → Reset Handset

**OK** Press the display key to confirm.

 Press and **hold** (idle status).

Cancel the reset with .

## Appendix

### Symbols and typographical conventions used

This section explains the meaning of certain symbols and typographical conventions that are used in this user guide.



Enter digits or letters.



The display functions currently in the bottom display line are shown in reversed highlights. Press the relevant display key to launch the function.



Press the top or bottom of the control key, e.g. when scrolling.

↶ / 0 / \*△ etc.

Press the matching key on the handset.

**External Calls / Internal Calls (example)**

Select one of the menu functions (External Calls or Internal Calls) from the list and press **OK**.

**Menu** → **Audio Settings** → **Ringer Melody** (example)

Press **Menu**. Select **Audio Settings** with and press **OK**. Select **Ringer Melody** with and press **OK**.

### Care

- ▶ Wipe the charging cradle and the handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

**Never use a dry cloth.** This can cause static.

### Contact with liquid

If the handset has come into contact with liquid:

- ▶ **Switch the handset off and remove the batteries immediately.**
- ▶ Allow the liquid to drain from the handset.
- ▶ Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.).
- ▶ **Do not switch on the handset again until it is completely dry.**

When it has fully dried out you will normally be able to use it again.

## Questions and answers

If you have any queries about the use of your phone, you can contact us any time at [www.siemens.com/gigasetcustomercare](http://www.siemens.com/gigasetcustomercare). The table below contains a list of common problems and possible solutions.

<p><b>The display is blank.</b></p> <ol style="list-style-type: none"> <li>1. The handset is not switched on.           <ul style="list-style-type: none"> <li>▶ Press and <b>hold</b> the end call key .</li> </ul> </li> <li>2. The battery is flat.           <ul style="list-style-type: none"> <li>▶ Charge the battery or replace it (page 5).</li> </ul> </li> </ol>
<p><b>The keys of a handset do not respond when pressed.</b></p> <p>The keypad lock is activated.</p> <ul style="list-style-type: none"> <li>▶ Press and <b>hold</b> the hash key  (page 7).</li> </ul>
<p><b>Base flashes in the display.</b></p> <ol style="list-style-type: none"> <li>1. The handset is outside the range of the base station.           <ul style="list-style-type: none"> <li>▶ Move the handset closer to the base.</li> </ul> </li> <li>2. The base station is not switched on.           <ul style="list-style-type: none"> <li>▶ Check the base station mains adapter.</li> </ul> </li> </ol>
<p><b>Please Register flashes in the display.</b></p> <p>The handset is not registered.</p> <ul style="list-style-type: none"> <li>▶ Register the handset (page 5).</li> </ul>
<p><b>Handset does not ring.</b></p> <p>The ringtone is switched off.</p> <ul style="list-style-type: none"> <li>▶ Activate the ringtone (page 13).</li> </ul>
<p><b>You hear an error tone when keying an input</b> (a descending sequence of tones).</p> <p>Action has failed/invalid input.</p> <ul style="list-style-type: none"> <li>▶ Repeat the operation.           <ul style="list-style-type: none"> <li>▶ Watch the display and refer to the operating instructions if necessary.</li> </ul> </li> </ul>

### Service (Customer Care)

We offer you support that is fast and tailored to your specific needs!

Our Online Support on the Internet can be reached any time from anywhere.

<http://www.siemens.com/gigasetcustomercare> It provides you with 24/7 support for all our products. It also provides a list of FAQs and answers plus user guides and current software updates (if available for the product) for you to download.

You will also find frequently asked questions and answers in the appendix of this user guide.



For personal advice on our range of products and assistance with repairs or guarantee/warranty claims you can contact us on:

UK helpdesk: 0 84 53 67 08 12.

Ireland 18 50 77 72 77.

Please have your proof of purchase ready when calling with regard to guarantee/warranty claims.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

## Authorisation

This device is intended for use within the European Union and Switzerland. If used in other countries, it must first be approved nationally in the country in question.

Country-specific requirements have been taken into consideration.

We, Siemens Home and Office Communication Devices GmbH & Co. KG, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address: <http://www.siemens.com/gigasetdocs>.

CE 0682

## Specifications

### Recommended rechargeable batteries

(Valid at the time of going to press)

Nickel-metal-hydride (NiMH):

- ◆ Sanyo Twicell 650
- ◆ Sanyo Twicell 700
- ◆ Sanyo NiMH 800
- ◆ Panasonic 700 mAh "for DECT"
- ◆ GP 550mAh
- ◆ GP 700mAh
- ◆ GP 850mAh
- ◆ Yuasa Technology AAA Phone 600
- ◆ Yuasa Technology AAA Phone 700
- ◆ Yuasa Technology AAA 800
- ◆ VARTA Phone Power AAA 700mAh

The handset is supplied with two recommended batteries.

### Handset operating times/charging times

The following information relates to batteries with a capacity of 650mAh.

Standby time	approx 130 hours (5 days)
Calling time	approx. 13 hours
Charging time	approx. 6 hours

The operating and charging times apply only when using the recommended batteries.

### General specifications

Dimensions, handset	140 x 53 x 28 mm (L x W x H)
Weight of handset with battery	116 g

## Guarantee Certificate United Kingdom

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user guides.
- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e. g. installation, configuration, software downloads). User guides and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence

for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.

- ◆ Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by: Siemens Home and Office Communication Devices GmbH & Co. KG, Schlavenhorst 66, D-46395 Bocholt, Germany.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customer's Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

## Guarantee Certificate Ireland

---

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
  - ◆ The device is opened (this is classed as third party intervention)
  - ◆ Repairs or other work done by persons not authorised by Siemens.
  - ◆ Components on the printed circuit board are manipulated
  - ◆ The software is manipulated
  - ◆ Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
- ◆ Devices fitted with accessories not authorised by Siemens
- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Home and Office Communication Devices GmbH & Co. KG, Schlavenhorst 66, D-46395 Bocholt, Germany.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customer's Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.


## Appendix

- ◆ Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.

## Writing and editing text

The following rules apply when writing a text:

- ◆ The cursor is controlled with .
- ◆ Characters are added to the left of the cursor.
- ◆ Press the hash key #<sup>↵</sup> **briefly** to switch from "Abc" mode to "123", from "123" to "abc", and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the hash key #<sup>↵</sup> **before** entering the letter.
- ◆ Press the hash key #<sup>↵</sup> three times: shows the selection line of the characters assigned to the hash key.
- ◆ The first letter of a directory entry name is automatically capitalised and is followed by lower case letters.

 
## Editing text

When you press and **hold** a key, the characters of that key appear in the bottom display line and are highlighted one after the other. When you release the key the highlighted character is inserted into the input field. For how to enter special characters, see page 18.

The display briefly shows whether upper or lower case letters or digits is selected when you switch from one mode to the next: the bottom text line displays "abc -> Abc", "Abc -> 123" or "123 -> abc".

## Order of directory entries

The directory entries are usually sorted in alphabetical order. Spaces and digits take first priority. The sort order is as follows:

1. Space (shown here as )
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To get round the alphabetical order of the entries, insert a space or a digit in front of the name. These entries will then move to the beginning of the directory. Names which you have preceded with an asterisk will move to the end of the directory.

## Entering special characters

### Standard characters

	1	0	* <sup>↵</sup>	# <sup>↵</sup>
1x	*)    **)	.	*	Abc-> 123
2x	1    ↵	,	/	123 -> abc
3x	£    1	?	(	#
4x	\$    €	!	)	@
5x	¥    £	0	<	\
6x	□    \$	+	=	&
7x	¥	-	>	§
8x	□	:	%	
9x		¿		
10x		¡		
11x		“		
12x		’		
13x		;		
14x		–		

\*) Directory and other lists

\*\*) When writing an SMS

# Index

---

## Numerics

24 hours in advance (alarm clock) . . . . . 14

## A

### Activating

advisory tones . . . . . 13  
 auto answer . . . . . 12  
 handset . . . . . 7  
 handsfree talking . . . . . 9  
 keypad lock . . . . . 7  
 muting ringtone . . . . . 13

Advisory tones . . . . . 13

Alarm clock . . . . . 14

key . . . . . 1

Alarm repeat . . . . . 14

Auto answer . . . . . 9, 12

## B

### Batteries

charging . . . . . 5  
 display . . . . . 1  
 inserting . . . . . 4  
 recommended batteries . . . . . 16  
 warning tone . . . . . 13

Battery cover . . . . . 4

Battery icon . . . . . 5

Belt clip . . . . . 8

## C

### Call

answering . . . . . 9  
 ending . . . . . 9  
 external . . . . . 9

Call acceptance . . . . . 12

Care, phone . . . . . 15

Charge level display . . . . . 5

Charge status (batteries) . . . . . 1

Colour scheme . . . . . 12

Confirmation tone . . . . . 13

Connecting the charging cradle . . . . . 4

Connection socket for headset . . . . . 1, 8

Contrast . . . . . 12

Control key . . . . . 1, 7

Correcting incorrect input . . . . . 8

Customer Care . . . . . 15

## D

### Deactivating

advisory tones . . . . . 13  
 auto answer . . . . . 12  
 handset . . . . . 7  
 handsfree talking . . . . . 9  
 keypad lock . . . . . 7  
 muting ringtone . . . . . 13

Deleting characters . . . . . 8

### Dialling

directory . . . . . 10  
 last number redial list . . . . . 11

Digital clock . . . . . 12

Directory . . . . . 10

copying number from text . . . . . 11

opening . . . . . 7

order of entries . . . . . 18

select an entry . . . . . 10

send entry/list to handset . . . . . 10

storing entry . . . . . 10

storing the first number . . . . . 10

using to enter numbers . . . . . 11

### Display

changing display language . . . . . 12

colour scheme . . . . . 12

contrast . . . . . 12

illumination . . . . . 12

in idle status . . . . . 1

screensaver . . . . . 12

setting . . . . . 12

Display keys . . . . . 1, 7

## E

Earpiece mode . . . . . 9

Earpiece volume . . . . . 12

End call key . . . . . 1, 9

Ending, call . . . . . 9

Enter flash . . . . . 1

Enter pause . . . . . 1

Error tone . . . . . 13

## G

Guarantee Certificate . . . . . 16

## H

### Handset

activating . . . . . 7

advisory tones . . . . . 13

contact with liquid . . . . . 15

deactivating . . . . . 7

display language . . . . . 12

idle status . . . . . 7

loudspeaker volume . . . . . 12

operating and charging times . . . . . 16

overview . . . . . 1

preparing to use . . . . . 4

registering . . . . . 5

restoring factory settings . . . . . 14

setting (individual) . . . . . 12

Handset charging times . . . . . 16

Handset operating time . . . . . 16

Handsfree key . . . . . 1

Handsfree talking . . . . . 9

Hash key . . . . . 1, 7

Headset . . . . . 1, 8

Hearing aids . . . . . 3

## Index

- I**  
Idle status (display) . . . . . 1, 7  
Illumination . . . . . 12  
Incorrect input (correction) . . . . . 8  
Info tones . . . . . 13
- K**  
Key click . . . . . 13  
Keypad lock . . . . . 7  
Keys  
    alarm clock key . . . . . 1  
    assigning directory entry . . . . . 10  
    Control key . . . . . 1, 7  
    display keys . . . . . 1, 7  
    end call key . . . . . 1, 9  
    handsfree key . . . . . 1  
    hash key . . . . . 1, 7  
    keypad lock . . . . . 7  
    message key . . . . . 1  
    On/Off key . . . . . 1  
    recall key . . . . . 1  
    speed dial . . . . . 10  
    star key . . . . . 1, 13  
    talk key . . . . . 1, 9
- L**  
Last number redial . . . . . 11  
Liquid . . . . . 15  
Lock (keypad) . . . . . 7  
Loudspeaker volume . . . . . 12
- M**  
Mains adapter . . . . . 3  
Making calls  
    answering a call . . . . . 9  
    external . . . . . 9  
Medical appliances . . . . . 3  
Menu  
    end tone . . . . . 13  
    menu guidance . . . . . 8  
Message key . . . . . 1  
    opening lists . . . . . 11  
Microphone . . . . . 1  
Muting the first ringtone . . . . . 13
- N**  
Number  
    copying from directory . . . . . 11  
    storing in the directory . . . . . 10, 11
- O**  
On/Off key . . . . . 1  
Operation (preparing to use the handset) . . . 4  
Order of entries in directory . . . . . 18
- P**  
Pack contents . . . . . 4  
Preparing to use (handset) . . . . . 4
- Q**  
Questions and answers . . . . . 15
- R**  
Recall key . . . . . 1  
Ringtone  
    muting . . . . . 13  
    setting melody . . . . . 13  
    setting volume . . . . . 7, 12
- S**  
Safety precautions . . . . . 3, 4  
Screensaver . . . . . 12  
    screensaver see screensaver  
Service . . . . . 15  
Setting date . . . . . 6  
Setting melody (ringtone) . . . . . 13  
Setting time . . . . . 6  
Setting volume  
    earpiece . . . . . 12  
    handset loudspeaker . . . . . 12  
    loudspeaker . . . . . 12  
    ringtone . . . . . 12  
Setting wake up time . . . . . 14  
Signal strength . . . . . 1  
Snooze (alarm clock) . . . . . 14  
Special characters . . . . . 18  
Specifications . . . . . 16  
Speed dial . . . . . 10  
Star key . . . . . 1, 13  
Symbols . . . . . 15
- T**  
Talk key . . . . . 1, 9  
Text  
    editing . . . . . 18  
    writing . . . . . 18  
Troubleshooting . . . . . 15
- W**  
Warning tone (batteries) . . . . . 13