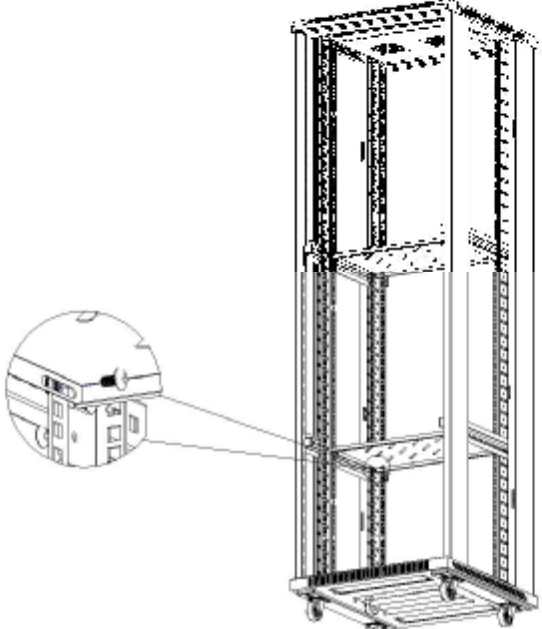
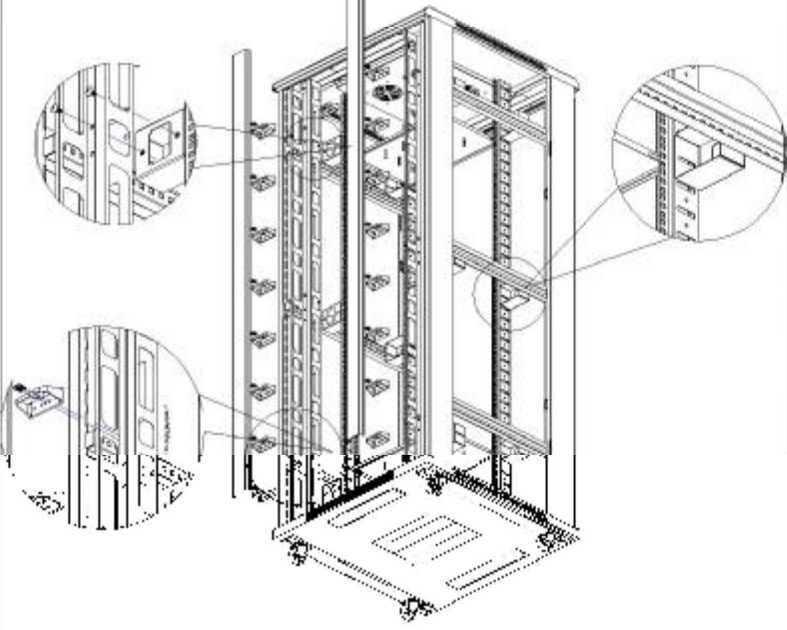
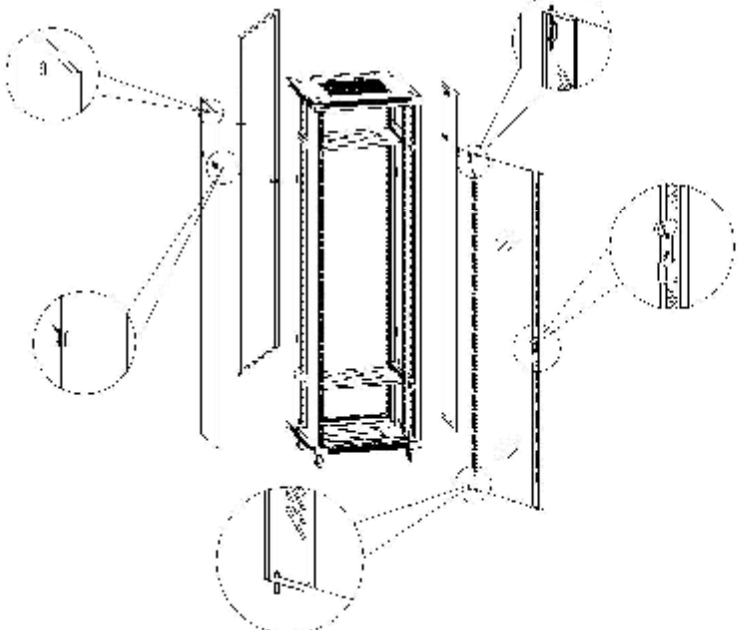


INSTALLATION MANUL

STEP	DESCRIPIZON	PICTURE	PARTS
A	<p>A1. Install the fan unit on the top panel considering cable plug in the rear side with M4+ screw</p> <p>A2. Use the M4+ screw to fix the door touching.</p> <p>A3. Use the M8 Hex screw and nuts to connect the frame with top and bottom panel, Ensure the panel with earthing kit is in the bottom and panel with ventilation is on top. ensure the bottom panel's earthing kit is in the rear side of the cabinets</p>		<p>Frame 2pcs Top panel 1pc Bottom panel 1pc Fan tray with the fans 1pc M8 hex screw 16pc M8 nuts 8pcs Door touching 8pcs M4 +screw 20pcs</p>
B	<p>B1. Use the M4 + screw to install the cable entry panel on the top and bottom.</p> <p>B2. Use the M5 +screw to install the castors on the bottom panel.</p>		<p>Castors 4pcs Cable entry panel 7pcs M4 +screw 14pcs M5 +screw 16pcs</p>
C	<p>C1. Install supplied mounting angle (6pcs for above 32u and 4pcs for 32u and below 32u) on both side of the frame with locking in frame holes and use the M6 hex screw and nuts.</p> <p>C2. Install mounting rails on both side of installed mounting angel with M6 hex screw and nuts.</p>		<p>M6 hex screw 48pcs M6 nuts 48pcs Rail 4pcs Mounting angle: 6pcs (note: below 32u 4pcs)</p>

INSTALLATION MANUL

STEP	DESCRIZION	PICTURE	PARTS
D	<p>D1. Install fix shelf on the rail use the M6 hex screw and nuts.</p>		<p>Fix shelf 2pcs M6 hex screw 8pcs M6 cage nuts 8pcs</p>
E	<p>E1. Install supplied spacer (optional for 800mm width cabinet, 12pcs for above 32u and 8pcs for 32u and less) on both side of installed mounting angle with M6 hex screw and nuts. Install the mounting rails on installed spacer with M6 hex screw and nuts. E2. Install the vertical cable management use the M6 hex screw and nuts</p>		<p>Spacer 12pcs (below 32u 8pcs) Vertical cable management 2pcs M6 hex screw 36pcs M6 cage nut 36pcs</p>
F	<p>F1. Install supplied key lock for side door and rear door. F2. Install supplied spring key lock with disassembling and assembling in the front door. F3. Install the front and rear door, connecting door lock into the bottom of the frame and spring door lock into the top of the frame. Install the side panels with locking its top and bottom part in to the installed plastic door lock; adjust the diagonal dimension of cabinets.</p>		<p>Front door 1pc Front door lock 1pc Spring lock for the front door 1pc Front door bolt for bottom 1pc Side door 2pcs Plastic clatch 2pcs Side door bolt 8pcs Rear door 1pc Rear door lock 1pc Spring lock for the rear door 1pc Rear door bolt for bottom 1pc</p>